

# Boulder Creek Meeting Room Instructions

---

## Playing an Composite AV Device (DVD, VHS, Camcorder or video game console)

1. Turn power to projector using wall control(circled below)



\*\*\*You should hear the projector start up\*\*\*

2. Plug in RCA cables from the output of your device to the wall plate provided



3. Select "Game" from touch screen wall control.
4. Lower the screen by pressing the "Projection Screen" toggle switch. This is located to the right of the wall control.
5. Adjust volume by pressing the "VOL+" and "VOL-" (pictured below)






## Using a Computer

1. Turn power to projector using wall control(circled below)



2. Connect cables from Laptop to wall plate provided

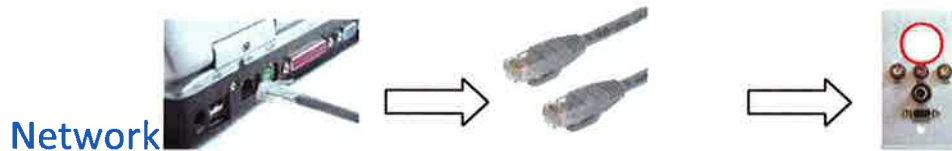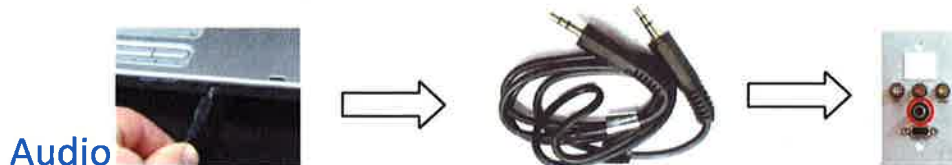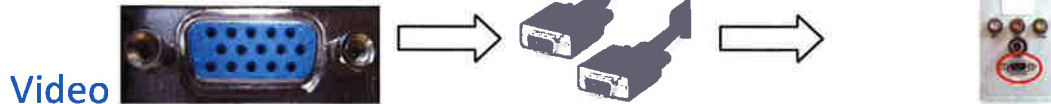

3. Select "Computer" from touch screen wall control.
4. Lower the screen by pressing the "Projection Screen" toggle switch. This is located to the right of the wall control.
5. Adjust volume by pressing the "Vol+" and "Vol-" (pictured below)



6. When finished please reverse order 5-1.

## Notes:

All AV equipment is located on the south wall and is available as a free service to the public. Technical support is not guaranteed. Patrons are responsible for all connections and A/V input equipment. Please do not adjust or disconnect cables for any reason.

Thank You,  
Boulder Public Library staff